

A-Series Furniture

Assembly Instructions

Corner Desk Assembly

CALSTONE INC - 160712

Component Parts:


- 1 - Desk Top
- 2 - Desk Legs (cut-back)
- 1 - Corner Post
- 2 - Back Panels

Hardware:

- #10 x 5/8" Combination Screws
- #10-24 1/2 Machine Screws
- Hex Bolts and Washers

Desk Assembly:

1. Place desk top on floor, with threaded top inserts facing up (laminated side face down).
2. Place desk legs onto top and align all holes on the leg mounting plate with the threaded inserts on table top.
3. Insert hex bolts with washers through each hole on leg mounting plate into the threaded inserts of the top. **DO NOT TIGHTEN.**
4. Line up the holes on the sides of back panel to the holes on the inner side of the legs. Insert metal black screws and tighten.
5. Align holes on the other side of the back panels to the holes on the corner post leg. Insert metal black screws and tighten.
6. Once back panel is secured to both legs and corner post, secure the corner post to the table top using wood combination screws.
7. Tighten all hex bolts and washer on both legs.
8. Secure both back panels to table top using wood combinations screws.
9. Flip table right side up and level with glides.
10. Connect corner desk to side run-offs using joiner plate, hex bolts and washers. Threaded inserts are provided for securing joiner plate to worksurface.

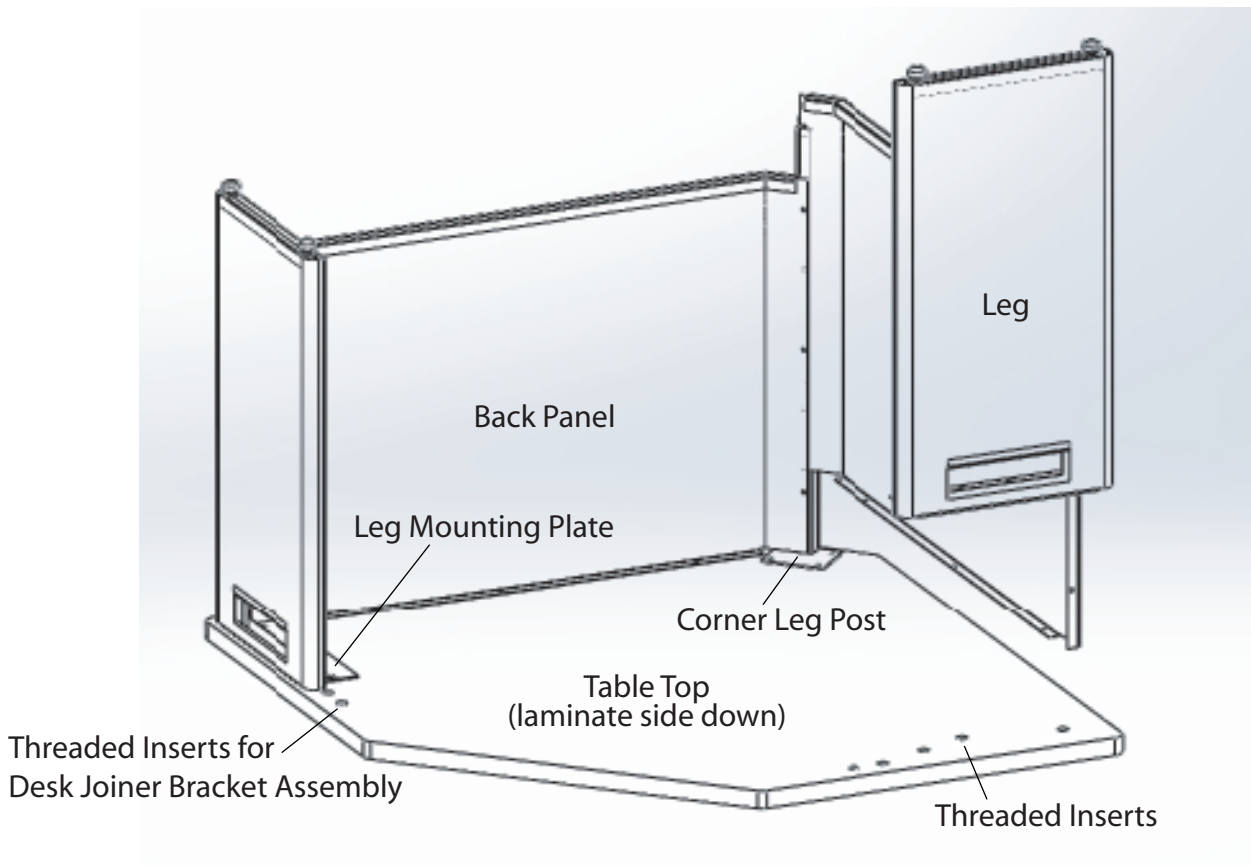

Do not discard packaging material until all contents are located