

Business Furniture

Assembly Instructions

P-Tops & D-Tops

Inspected By: _____


Component Parts:

- 1 - Desk Top
- 1 - Conference Column
- Assembly Screws
- Connecting brackets

Optional Modesty Panel

P-Tops & D-Tops: Column Assembly:

1. Place conference column on underside of D or P Top, as shown. Pre-drill 8 holes, 5/32" diameter, 1/2" deep and assemble with #12 x 1" screws.
2. Fasten D or P table to desk, with link connector bracket, and support table at other end with boxes, etc. to level table.
3. Drill 4 holes, 5/32" diameter, through mounting shell into column.
4. Fasten column with #10 combination screws.

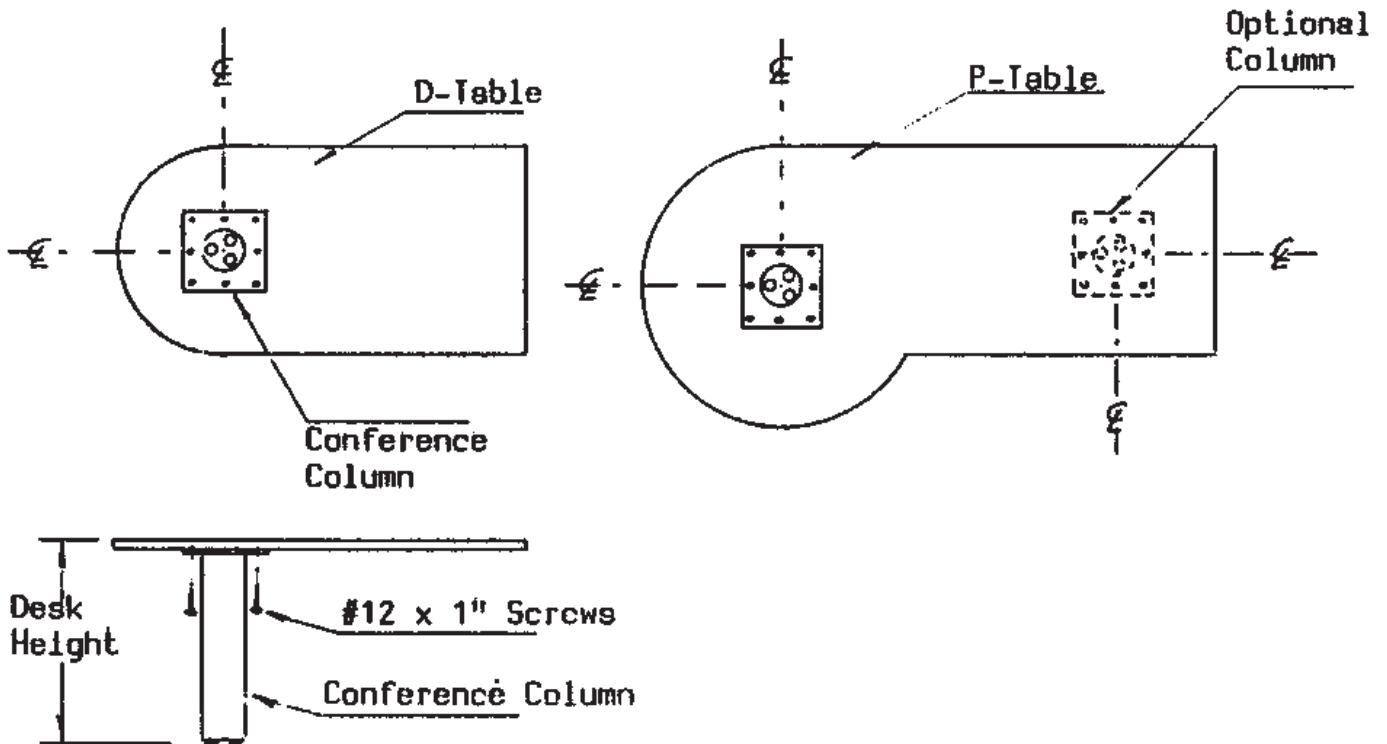

Do not discard packaging material until all contents are located