

Business Furniture

Assembly Instructions

Privacy Panels

Inspected By: _____


Component Parts:

- 1 - 180 Degree Bottom Panel Connector c/w 2 Glides
- 1 - 180 Degree Top Panel Connector
- 2 - 1/4-20 x 3/4" Round Head Slotted Machine Screws

NOTE: Above items come with every screen

Screen Assembly - 180 Degree:

1. Remove top cap from screens to be connected by inserting screwdriver under top cap and prying carefully to lift off.
2. Insert one tapered portion of 180 degree bottom panel connector into hole in bottom of screen. (Ensure glides are fully turned up into the connector.)
3. Take next screen and place over the other tapered portion of 180 degree bottom panel connector. Some movement of screen may be required until it drops fully onto the connector.
4. Hold top of connecting screens together and place 180 degree top panel connector on screens.
5. Insert 3/4" screws into threaded inserts on tops of screens, through fabric, and secure tightly.
6. When fully assembled, replace top caps by centering them on top of the screens and firmly securing them into place.

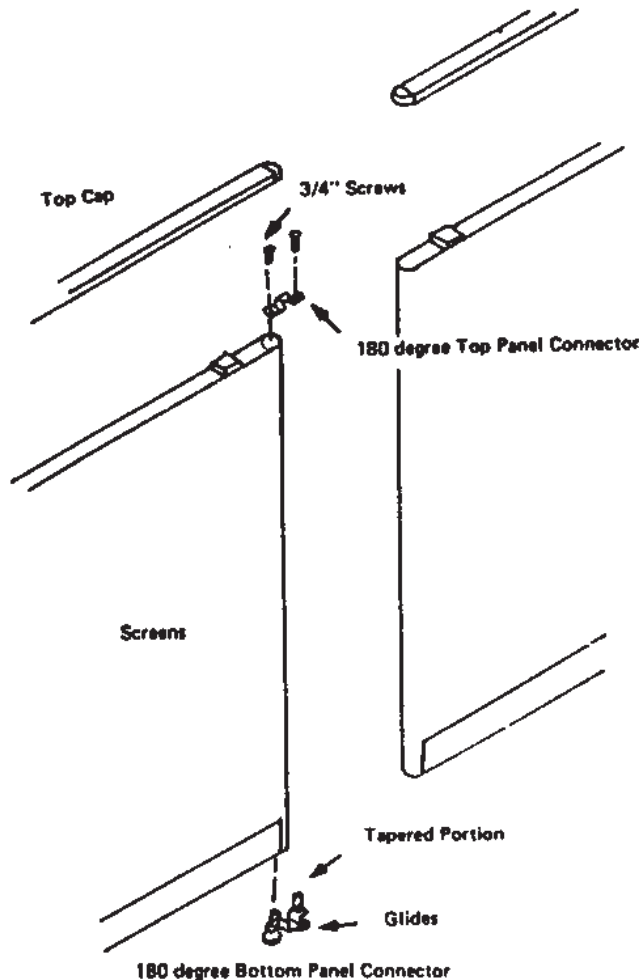

Do not discard packaging material until all contents are located