

Business Furniture

Assembly Instructions

Privacy Panels


Inspected By: _____

Component Parts:

- 1 - 90 Degree Bottom Panel Connector c/w 2 Glides
- 1 - 90 Degree Top Panel Connector
- 2 - 1/4-20 x 3/4" Round Head Slotted Machine Screws
- 1 - Corner Post

Screen Assembly - 90 Degree:

1. Remove top cap from screens to be connected by inserting screwdriver under top cap and prying carefully to lift off.
2. Insert one tapered portion of 90 degree bottom panel connector into hole in bottom of screen. (Ensure glides are fully turned up into the connector.)
3. Place corner post (with threaded insert up), over second tapered end of 90 degree bottom panel connector.
4. Take next screen and place over the other tapered portion of 90 degree bottom panel connector. Some movement of screen may be required until it drops fully onto the connector.
5. Hold top of connecting screens together and place 90 degree top panel connector on screens and post.
6. Insert 3/4" screws into threaded inserts on corner post, then on tops of screens, through fabric, and secure tightly.
7. When fully assembled, replace top caps by centering them on top of the screens and firmly securing them into place.

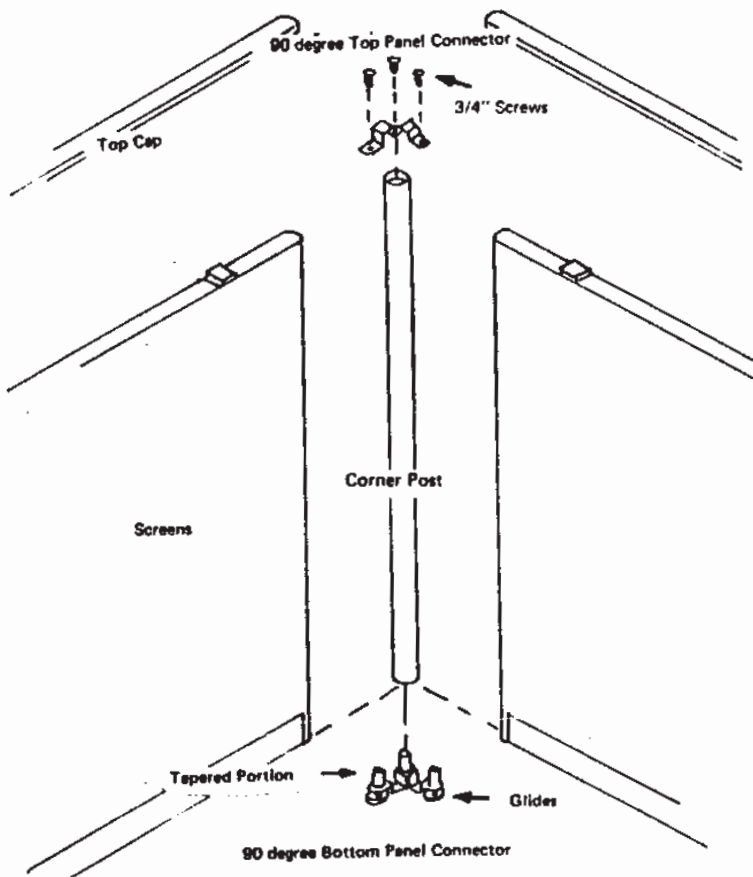

Do not discard packaging material until all contents are located